

Software Installation Guide for Integrated Power Systems

You will need:

- WatchPower Installation CD
- IPS to RS232 Communication Cable
- USB to RS232 Cable
- USB to RS232 Driver Mini CD

WatchPower Software Installation

1. Insert Watchpower Installation CD into your computer. The software will start automatically, if not browse to the disc and run **autorun.exe**.
2. Select **Install** on WatchPower splash page
3. Software will prepare for installation - this may take a couple minutes.
4. Once the software is ready, select your desired language and click the **OK** button.
5. Follow on screen directions for choosing install folder and shortcut folder using **previous/next** buttons, then confirm the pre-installation summary and select **Install**.
6. Select **Done** to complete installation. WatchPower is now installed and ready to use on your computer.

USB to RS232 Driver Installation

1. Insert USB to RS232 Driver Mini CD into your computer. Browse to the CD and open to view files.
2. Open the folder named **HL-340**.
3. Inside this folder, open **HL-340.exe**.
4. When the setup page appears, select **Install**.
5. Driver will install - this may take a couple minutes.
6. Click **Exit** when the driver has installed.

Connecting your IPS to the Software

1. Connect USB to RS232 cable with IPS to RS232 Cable
2. Connect IPS to RS232 Cable to Comms port on IPS
3. Connect USB to RS232 Cable to USB on computer
4. System will begin communicating with WatchPower Software.

Having trouble installing? Contact us on 1300 877 554 or via www.giantpower.com.au and we'll be happy to assist.